


Набор мебели «Линет» CB 368 схема сборки

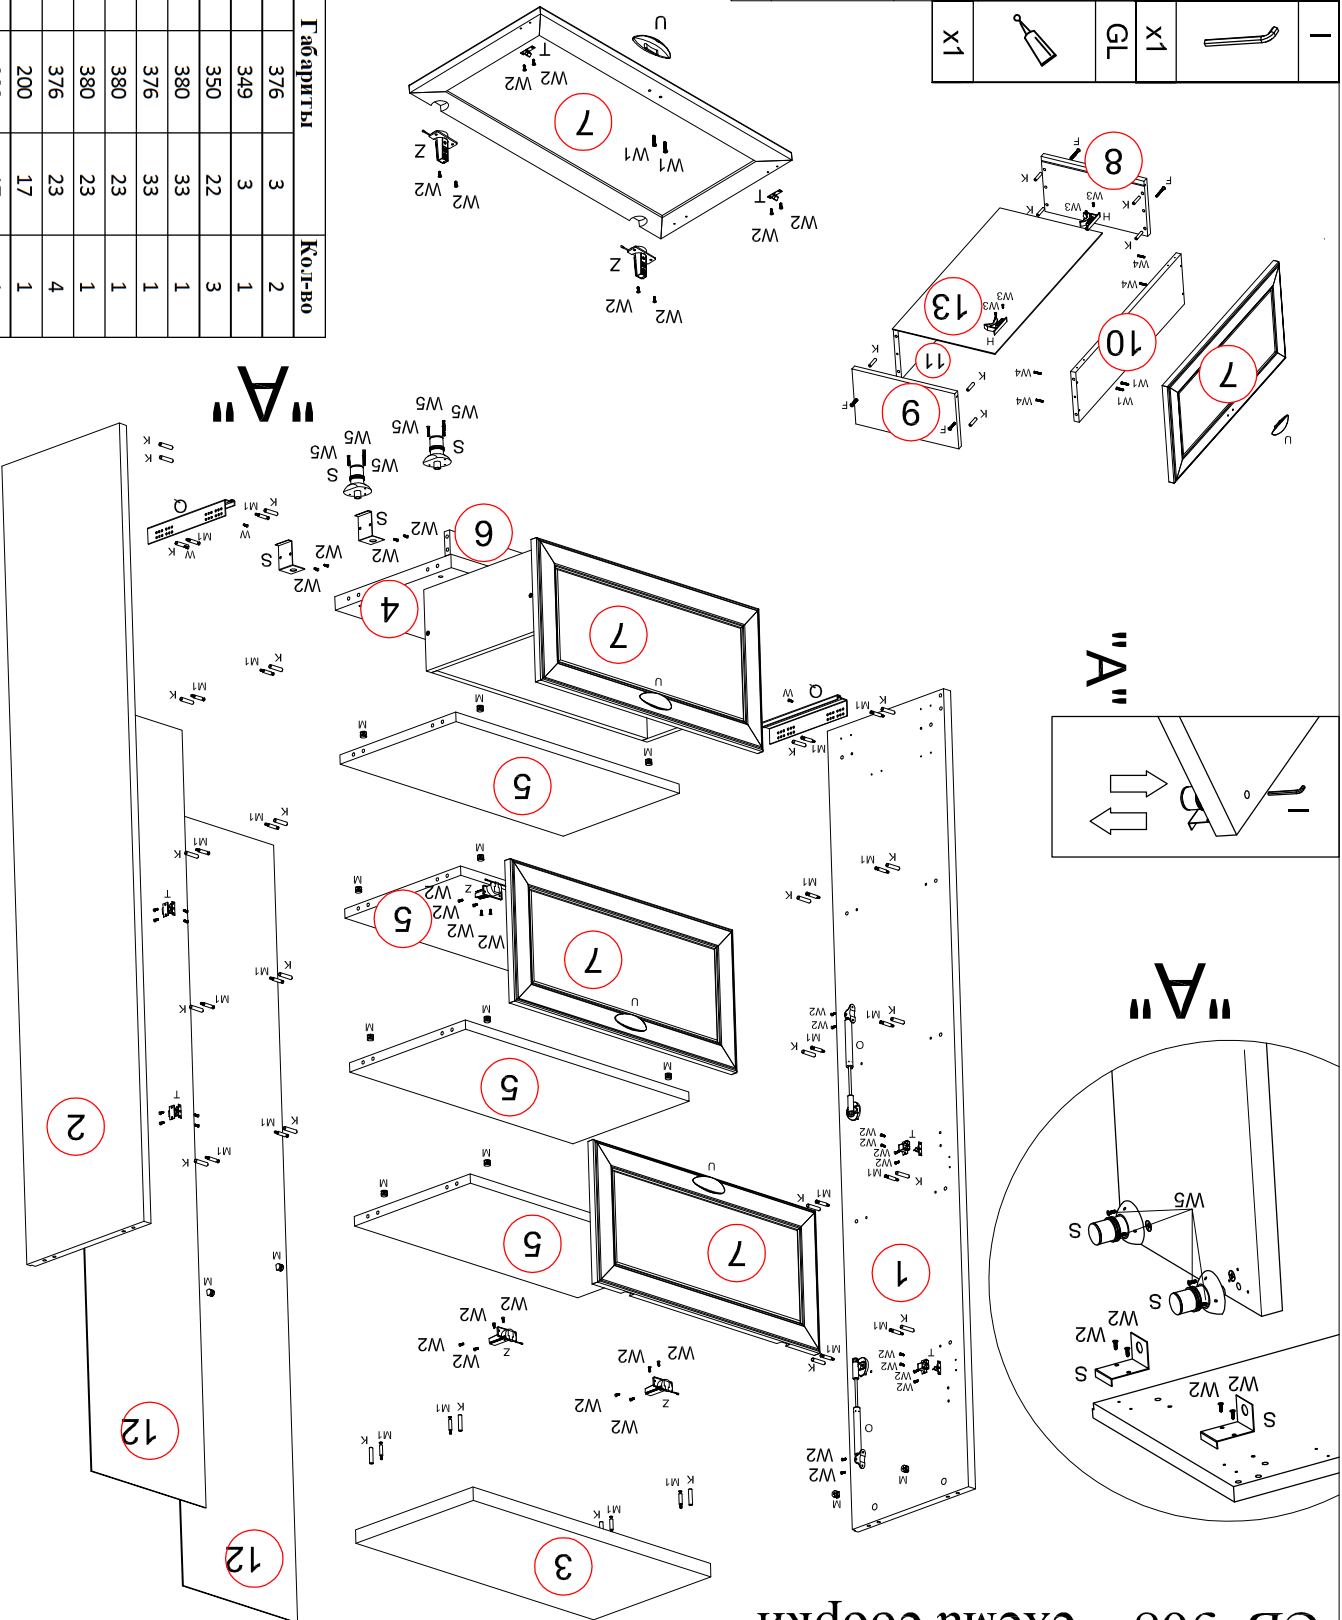

№ дет.	Код детали	Размеры			Кол-во
12	3.368.01.01	1909	376	3	2
13	Л.368.01.05	704	349	3	1
7	Л.368.01.01	729	350	22	3
3	К.368.01.01	780	380	33	1
4	Л.368.01.01	733	376	33	1
1	Б.368.01.01	1960	380	23	1
2	Б.368.01.02	1960	380	23	1
5	Л.368.01.02	733	376	23	4
8	Л.368.01.02	350	200	17	1
9	Л.368.01.02	350	200	17	1
10	Л.368.01.03	691	181	17	1
11	Л.368.01.04	691	181	17	1
6	Л.368.01.01	733	60	17	1

K	Z	W5	O	I
8x30		3x25		
X40	X4	X12	X2	X1
M1	W1	W4	M	GL
X24	X6	X4	X20	X1
M	U	Q	F	
DSP 32		350	7x50	
X4	X3	X2	X4	
T	W2	W		
	4x16	4x13		
X4	X44	X4		
S	H	W3		
		3x13		
X4	X2	X4		